 





CHESTNUT

泰摩栗子SLIM+咖啡豆研磨器
使用说明书

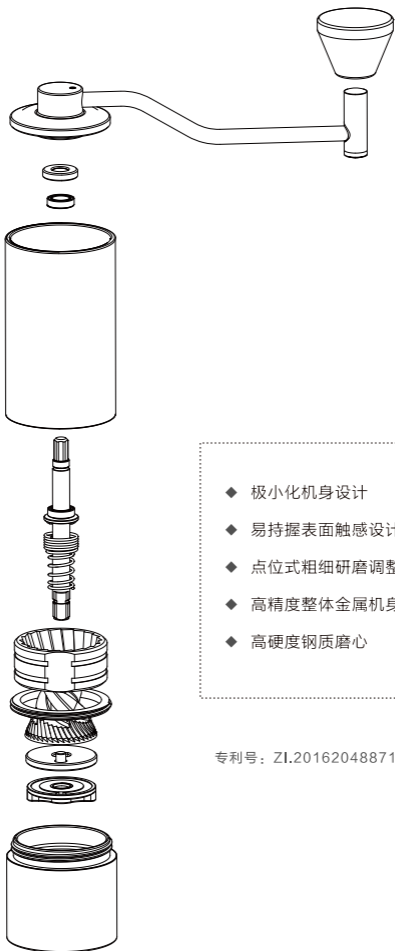

- ◆ 极小化机身设计
- ◆ 易持握表面触感设计
- ◆ 点位式粗细研磨调整
- ◆ 高精度整体金属机身
- ◆ 高硬度钢质磨心

 专利号：ZL201620488714.6

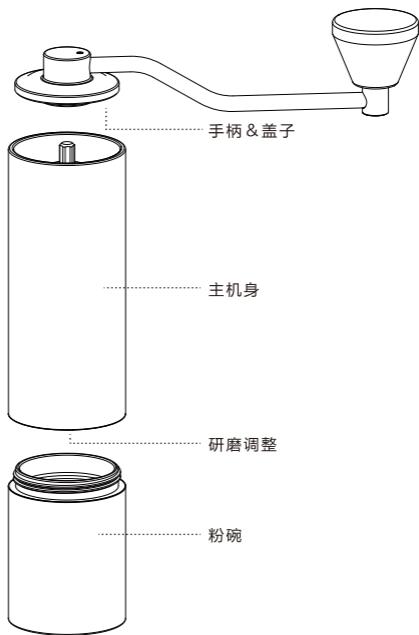

主机身 : 铝合金6063

 
粉碗 : 铝合金6063

手柄摇杆: 奥氏体不锈钢17Cr18Ni9



中轴 : 奥氏体不锈钢17Cr18Ni9

磨芯 : 马氏体不锈钢20Cr13 (SLIM+)


研磨机的使用方法

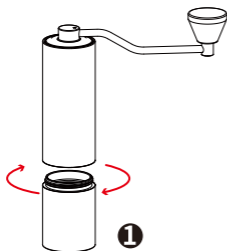

旋出粉碗，在主机身下端调整至所需的研磨粗细度

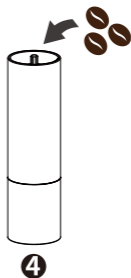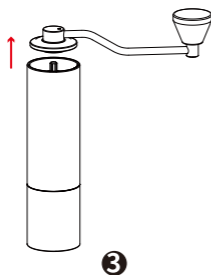  

旋紧粉碗，打开上端手柄盖子，从顶端倒入咖啡豆（一次不多于20g）

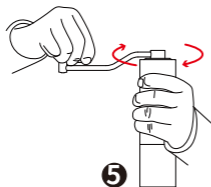 

盖上盖子，一手持握另一手摇动手柄进行研磨。研磨后旋出粉碗，倒出咖啡粉。

研磨度的调节

此端面为研磨度调节器



- ◆ 顺时针旋转研磨度变细，逆时针旋转研磨度变粗。
- ◆ 顺时针旋转至最细极限时手柄会无法转动，此时为原点。
- ◆ 以原点为基准，逆时针旋转N格，来调整研磨度。

不同萃取方式所需旋转格数参考下列图表。

以原点为基准

意式咖啡 8-11 格

手冲咖啡 15-19 格

法压壶 20-22 格

- ◆ 调整研磨度时需要将手柄盖子盖上
- ◆ 研磨度表格仅为经验估值，仅供参考，请根据实际调整
- ◆ 为保护磨心，请勿在0-6格范围内研磨
- ◆ 逆时针转动过多会导致磨心结构被拆卸

注意事项

- ◆ 本设备仅为研磨烘焙后咖啡豆设计，请勿研磨其他物品。
- ◆ 建议使用毛刷对设备进行清理，请勿水洗。
- ◆ 磨芯边缘较为锋利，请注意以免划伤。
- ◆ 请勿让儿童操作本产品。
- ◆ 在背阴干燥环境下存放本产品。
- ◆ 不建议自行拆卸、更换磨心及其他内部部件，如有特殊需求，请在相关技术人员指导下进行。

故障排除

- ◆ **Q:调整研磨度时调节旋钮出现空转**

A:内部弹簧或者是内外磨心卡住。可尝试单手握住机身同时另一只手晃动把手，直到听到咔哒一声，此时表明弹簧或者磨芯已经弹出。如未弹出，可拧松上端轴承螺母上的挡片，拆出整个轴与磨芯，进行清理并装回。

违反以上注意事项所导致的后果，我司不承担相应责任。

售后保修卡 WARRANTY CARD

感谢您购买 TIME MORE 品牌产品, 凭此售后卡,
产品无人为损伤, 可享受七天无理由退换货, 一年免费保修服务。

Thanks for purchasing TIMEMORE products.
With this card, you are provided with one year warranty and
also could replace or refund for any reason within 7 days
since you receive it if it's not deliberately damaged.

产品名称或型号 Product Name / Item No. _____

购买时间 Order Date _____

购买渠道 Purchase Method _____

订单编号 Order NO. _____

购买地区 Order Area _____

客户姓名 (必填) Customer name _____

客户联系方式 (必填) Customer Tel. _____

退货原因 (必填) Reason _____

退换登记 Replace&Refund

维修 Repair

换货 Replace

退货 Refund

售后服务网点 上海 Address-Shanghai

上海市浦东新区东明路2200号301
Room 301 No.2200 Dongming Road,
Pudong District, Shanghai, China

上海市奉贤区奉城镇路口村827号
Lukoucun 827# Fengcheng Town,
Fengxian District, Shanghai, China

售后服务联系 Contact

联系电话 Tel: 400-684-0200

官网信息 Web: www.timemore.com

 
微信公众号 Wechat official account: timemore_coffee
(右侧扫码 scan right code)



请妥善保管此凭证 Please keep this card




CHESTNUT
TIMEMORE CHESTNUT SLIM+
COFFEE GRINDER
User' s Manual

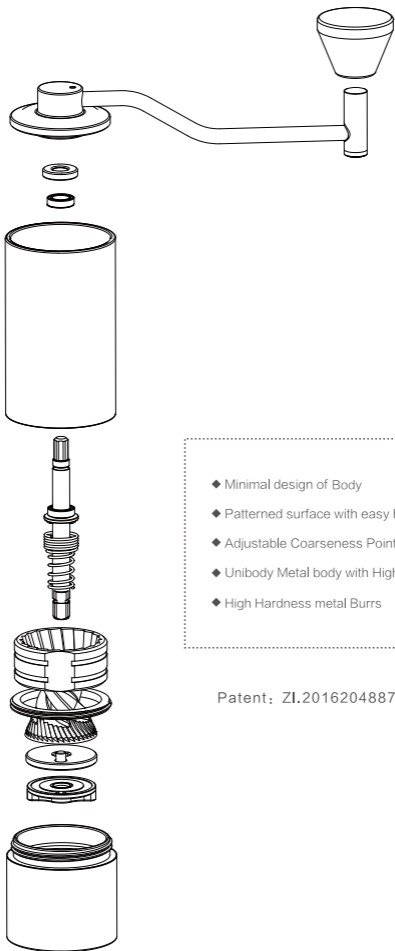

- ◆ Minimal design of Body
- ◆ Patterned surface with easy hand grip
- ◆ Adjustable Coarseness Point to Point
- ◆ Unibody Metal body with High precision
- ◆ High Hardness metal Burrs

 Patent: ZI.201620488714.6

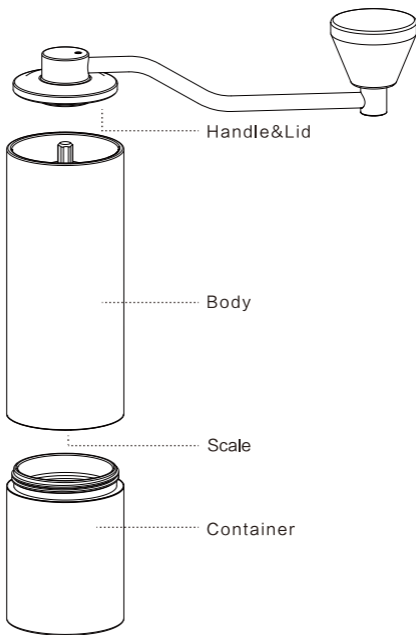

BODY : Aluminum Alloy 6063

 
 
CONTAINER: Aluminum Alloy 6063

HANDLE: Austenitic stainless steel 17Cr18Ni9



CENTRAL AXLE: Austenitic stainless steel 17Cr18Ni9

BURRS : Martensitic stainless steel 20Cr13 (SLIM+)


How to Grind

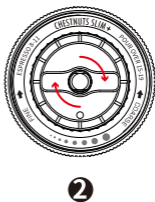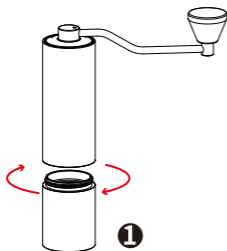

  Pull out the container. Set up coarseness by turning the scale at the bottom of the body.

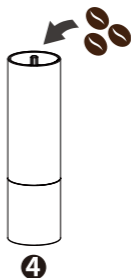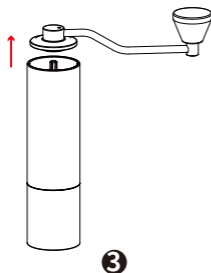

 Fasten Body with the container. Then open the lid and pour coffee beans inside from the top of the grinder (less than 20g).

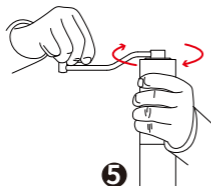

Hold the body and rotate the handle.

Pull out the container and pour the ground coffee after grind is finished.

How to Adjust



- ◆ Rotate clockwise for Finer grinding.
Rotate anti-clockwise for coarser grinding.
- ◆ Rotate clockwise to the end, this position is called START POINT.
- ◆ You can refer to the start point to adjust the Coarseness which you prefer.

ESPRESSO	8-11 Clicks
POUR OVER	15-19 Clicks
FRENCH PRESS	20-22 Clicks

- ◆ Cover the lid before your adjust coarseness.
- ◆ The table above is for your reference only.
- ◆ **DO NOT try to grind coffee beans at the finest 0-6 clicks to protect the Burr sharpness.**

Caution

- ◆ The device is for grinding coffee beans only. DO NOT grind other material.
- ◆ It's recommended to clean it with a brush. DO NOT wash it with water.
- ◆ Be careful of the sharp metal burrs. Keep kids from using it.
- ◆ Keep it in a cool and dry place.
- ◆ It's not recommended that customers disassemble or replace any part of it.
- ◆ If you have any special requirement, kindly operate with the advice from related professional persons.

Troubleshooting

- ◆ Q: Why is the scale of the adjuster too loose to adjust the coarseness?

A: Because the spring or the burrs get stuck. Try to hold the body and shake the handle slightly till you hear a click, which means the spring or burrs are loose. If not, try to unscrew the lid above the bearing and take the whole burr set out. Clean the burr sets and install them.

We won't take responsibility if customers are against these notifications above.

CHESTNUT

泰摩栗子SLIM+咖啡豆研磨器

TIMEMORE CHESTNUT SLIM+ COFFEE GRINDER

泰摩咖啡是专注于咖啡器具的原创设计品牌

以“专业+美学”的设计理念

打造有价值的咖啡器具产品

旨在让人们享受自己制作的慢生活时光

TIMEMORE Coffee specializes in
original specialty coffee equipment.

With Philosophy of Profession and Aesthetics

Create valuable coffee equipment

Let's enjoy slow living with more time

CONTACT

✉ info@timemore.com

www.timemore.com



@TIMEMORECOFFEE